

ASSEMBLY INSTRUCTION MANUAL MODEL: F412 PEC DEC ATTACHMENT

PARTS CHART					
NO.	DESCRIPTION	QTY.	0	(1>
201 202 203 204 205	PEC DEC SUPPORT PEC DEC PULLEY FRAME LEFT PEC DEC ARM RIGHT PEC DEC ARM SINGLE PULLEY BRACKET	1 1 1 1 1	201		02 04
NO. 211 212 213 214 215 216 217	DESCRIPTION 50 SQ. END PLUG 3/8" BUSHING 3/4" METAL BUSHING PULLEY FOAM PAD BACK PAD PEC DEC CABLE	QTY. 8 2 4 3 2 1	211 212 215	213	214
NO. 221 222 223 224 225 226 227 228 229	DESCRIPTION 1/2" X 3-1/8" HEX HEAD BOLT 3/8" X 2-3/4" HEX HEAD BOLT 3/8" X 1-3/4" HEX HEAD BOLT 3/8" X 1-3/4" HEX HEAD BOLT 1/2" WASHER 1/2" WASHER 3/8" WASHER 1/2" NYLON NUT 3/8" NYLON NUT	QTY. 2 1 2 3 2 4 4 4 4	217 (2380mm) 221 222 0 0 0 225 226 228 229	<i>©</i> 227	224
0 1/4 (inch)	1/2 3/4 1" 1/2 2" 1/2	3"	1/2 4" 1/2	5" 1/2	e.]

A: ASSEMBLY INSTRUCTION OF PEC DEC ATTACHMENT


 Attach Pec Dec Support(201) and Pec Dec Pulley Frame(202) to Front Upright(101) using two Bolts(221), four Washers(226) and two Nuts(228).

2. Insert four 3/4" Metal Bushing(213) into Pec Dec Support(201). Insert Right Pec Dec Arm(204) through the hole on Pec Dec Support(201), tighten Bolt(228) and Washer(225) and back off approximately 1/2 turn so that arm moves freely. Repeat the same process to Left Pec Dec Arm(203).

3. Attach End Cap(211) onto the Pec Dec Support(201) and both Pec Dec Arm(204).

4. Wet the Foam Pad(215) and slide onto both Pec Dec Arm(203, 204).

5. Attach Back Pad(216) on Front Upright(102), using two Bolts(221) and Washers(226).

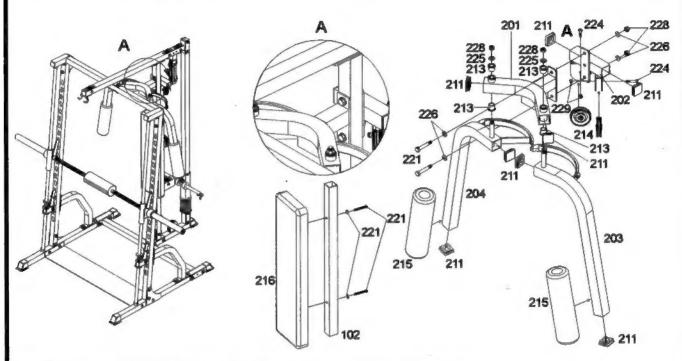

B: CABLE ASSEMBLY OF PEC DEC ATTACHMENT

Assemble cables and pulleys simultaneously.

Unhook the terminal end of Low Cable(137) and hook on the single Pulley Bracket(205). As shown Fig C
 Insert the Pec Dec Cable(217) through the Single Pulley Bracket(205), over the pulley on Pec Dec Pulley Frame(202) and attach steel ball end on carn of both Pec Dec Arm. As shown Fig B.

